



# The Switch Carry Pouch

## I N S T R U C T I O N S

The Switch Carry Pouch features the new, quick and easy Face In/Face Out option plus the convenient shopping restraint/support function.

The improved adjustable design of the pouch

allows for more freedom of movement for baby and provides greater head support. Innovative two way adjustment of the adult harness ensures simple fitting of most sizes and greater ease of adjustment.

### FACING IN (Option 1)

*Suitable for 0 - 12 mths or a comfortable carrying weight.*



1. Fit adult harness and adjust straps (a) & (b) for a comfortable fit. Hooks should be about waist level.



2. Attach bib to snaps on harness and attach the pouch front to hooks at waist level. Buckle one baby shoulder strap to top of pouch. Feed babies waist belt through tab on buckled side.



3. Carefully ease baby into pouch and while holding securely, buckle remaining shoulder strap.

### FACING IN (Option 2)



4. Feed remaining waist belt through side tab and buckle belt. Adjust to a comfortable fit. Adjust strap (C) to bring baby closer - release for more freedom.



1. Place baby in pouch. Feed waist belt through side tabs and buckle behind.



2. While holding baby, attach hooks to triangles in FRONT of pouch first.



3. Holding baby securely, attach baby's shoulder straps to top of pouch. Adjust strap (C) to bring baby closer - release for more freedom.

### TO BREAST OR BOTTLE FEED



To breast or bottle feed baby while in the carry pouch, simply release the buckle on the baby's shoulder strap on the side you wish to feed from, and tilt baby into position.



**CAUTION:** When using pouch in this position do not cook or be within reach of hot or dangerous objects.

### FACING OUT

*Suitable for 4-12mths or a comfortable carrying weight.*



**1.** With baby fitted in pouch, switch baby to the facing out position.



**2.** While holding baby, attach hooks to triangles on the BACK of the pouch first.



**3.** Still holding baby, buckle the lengthened shoulder straps into position and adjust to ensure baby is secure.

### USING THE POUCH AS A SHOPPING RESTRAINT

*Suitable for 4 mths to 3 years.*



Simply detach baby from the harness and the pouch can be used in a shopping cart to prevent a younger baby tipping or a toddler climbing out.

Place baby in shopping cart, release the waist buckle and feed belt through the bars. Buckle behind and adjust for a comfortable fit. Restraint can also be used on bar-backed chairs.

### STORAGE



For storage the pouch folds into a convenient carry pack.

1. Lay pouch out flat and fold waist belt into centre front.
2. Fold pouch twice, then once again tucking into the pocket.

### OPTIONAL BABY OUTDOOR COCOON

*Suitable for 0 - 6 mths.*



Available as an optional extra, the weather resistant Kapoochi Outdoor Cocoon snaps on to the pouch and also doubles as a pram bag.

**CAUTION:** Do not bend or lean over excessively when carrying a baby in the facing in or facing out position.

**CARE INSTRUCTIONS:** Machine wash separately Do not tumble dry or bleach Warm iron